



OPERATOR MANUAL

IMPORTANT INFORMATION, KEEP FOR OPERATOR

888-994-7636, fax 888-864-7636
powersoak.com

THIS MANUAL MUST BE RETAINED FOR FUTURE REFERENCE. READ, UNDERSTAND AND FOLLOW THE INSTRUCTIONS AND WARNINGS CONTAINED IN THIS MANUAL.

NOTIFY CARRIER OF DAMAGE AT ONCE It is the responsibility of the consignee to inspect the container upon receipt of same and to determine the possibility of any damage, including concealed damage. Power Soak suggests that if you are suspicious of damage to make a notation on the delivery receipt. It will be the responsibility of the consignee to file a claim with the carrier. We recommend that you do so at once.

Manufacture Service/Questions 888-994-7636.

This manual provides information for:

PS-4XX WASH TEMPERATURE SET POINT ADJUSTMENTS



HOW TO CHANGE PS-4XX HEATER SET-POINT

Our advanced PS-4XX controls now allow the user to change the set-point of the heater (water) temperature in standard wash cycle.. The units are preset at the factory to 114.8°F (45.5°C). This is the recommended water temperature.

However, certain applications may require the water temperature to be higher or lower than the preset. The following instructions describe how to change the preset value. Please read and become familiar with all instructions prior to making any changes in the controller.

CONTROL FEATURES

APPLICATION LOADING SCREEN



Application Loading screen appears with Power Soak Logo, once power is provided to the unit. The progress bar will be white during loading. After fully loaded, screen changes to Select Wash Cycle.

 
Note: This set point temperature adjustments are applicable only for the standard wash cycle.

PROCEDURE TO ADJUST THE SET POINT: (SEE IMAGES)

1. Press Hamburger menu (top left corner of the screen) and Press "Service" then enter "9999" and press "Confirm"; then select "Down arrow" (Bottom right corner of the screen)
2. Press "Temp Setpoint", it opens a new screen with "arrows" to Change the set point temperature
3. Use "UP" and "Down" Arrows to change the desired wash temperature.
4. Temp interval is 1°F. Lower limit is 100°F (37.8C) and upper limit is 120F (48.9°C).
5. Once adjusted to the desired set point temperature, select "Confirm" to save the new desired temperature.
6. Once "Confirm" is pressed, the screen will move back to previous screen.
7. To move to home screen, press the Hamburger menu (top left corner of the screen) twice.
8. To exit the "Temp Setpoint" window, click cancel and screen moves to previous screen.
9. Always Restart the unit when changes are made to the "Temp Setpoint".


Note: Screen look, and layout may be slightly different than shown. However, the procedure is same.

MENU BUTTON

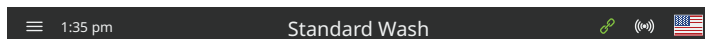


The Menu button is three horizontal lines in the upper left corner next to the time display. It is used to select and change various settings.

LANGUAGE BUTTON

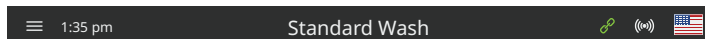


The Language button is a flag representing that language in the upper right corner. It is used to change the language of the displays.


Press the menu button in the top left hand corner of your screen.

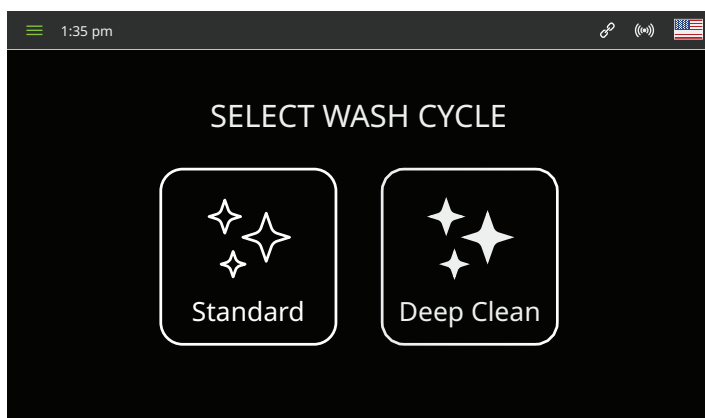


Select the Service button.

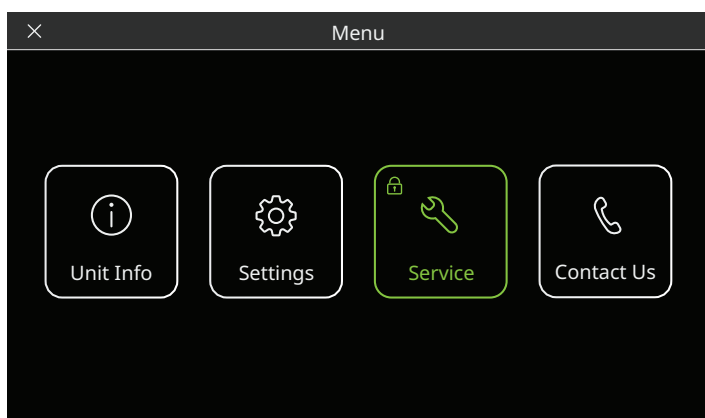


Enter the Service Code and press Confirm.

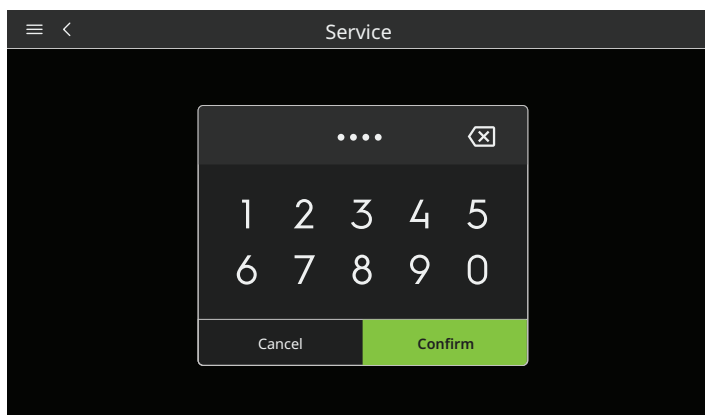


Select the bottom right arrow to scroll down on the Service screen.

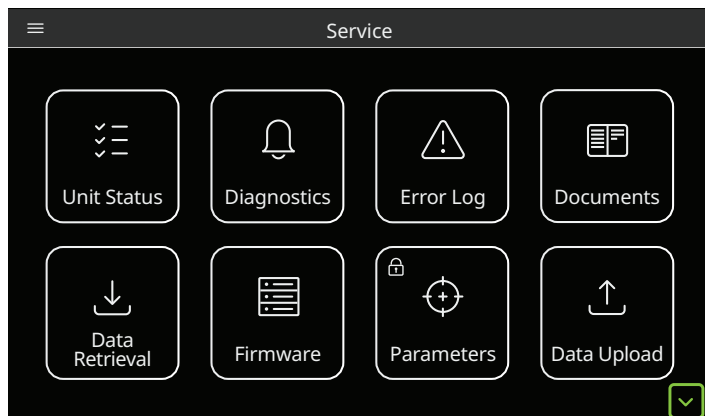

Select the Temp Setpoint button.

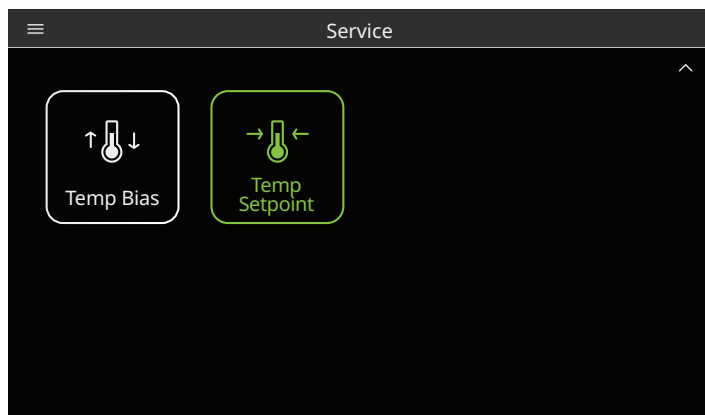

Select your temp setpoint by pressing the up or down arrows on the pop up screen. Then press Confirm.

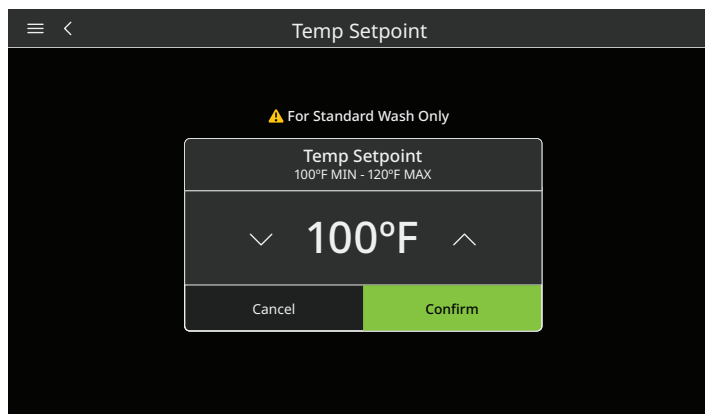

If the troubleshooting does not correct the problem, it is necessary to contact Power Soak at 888-994-7636.

If you see any error codes with respect to voltage, it can be cleared by turning the power to the machine off for a few seconds and then turning it back on.

Please have the "Error Code" information available prior to calling Power Soak Systems. The machine serial number will also be needed at the time of the call.

The serial number is 5-6 digits long and located on the lower corner of the wash tank closest to the controller.

Service Log

Model No:	Purchased From:
Serial No:	Location:
Date Purchased:	Date Installed:
Purchase Order No:	For Service Call:

[illegible]